

RILUXA

BAÑERA A PARED / *BACK-TO-WALL BATHTUB*

INSTRUCCIONES DE INSTALACIÓN /
INSTALLATION INSTRUCTIONS




Distributed by Riluxa, a licensee of the Corian® Design trademark. Riluxa assumes liability for the manufacture of this product.

For questions or concerns contact: contact@riluxa.com | +34 961 047 902 | www.riluxa.com


CORIAN® Design word mark and the CORIAN® Design logo are trademarks of affiliates of DuPont de Nemours, Inc. used under license by Riluxa.

1. PREPARACIÓN DEL PUNTO DE INSTALACIÓN / INSTALLATION SITE PREPARATION


HYDRA 170

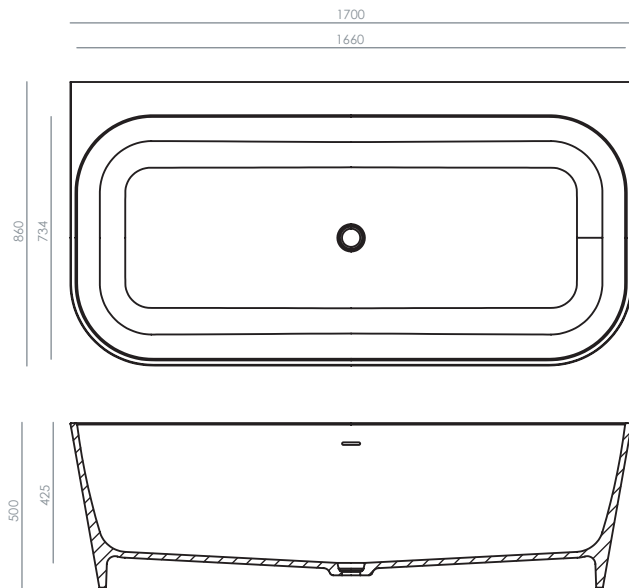

KIT SIFÓN / SIPHON KIT HC2600CLOV

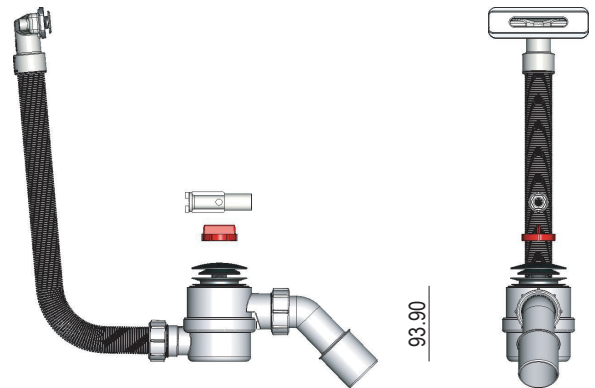

2

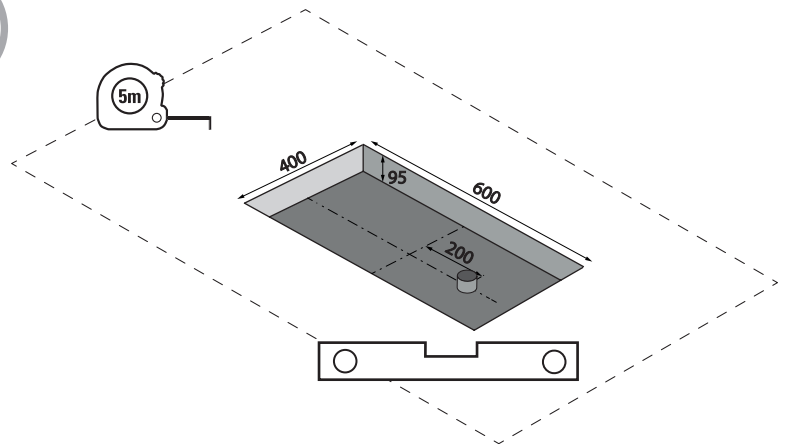

Asegurarse de que el suelo y la plataforma (si se instala) sean capaces de soportar un peso mínimo de 800 kg. Asegurarse de que el suelo y la superficie estén planos y nivelados.

Esta bañera puede instalarse sobre la superficie del suelo, o en una plataforma elevada o soterrada.

Si la bañera se coloca en el suelo, taladrar un orificio del tamaño y profundidad suficiente para dar cabida al conjunto de desagüe. Para practicar el orificio, se deben tener en cuenta las medidas de la bañera.

El área de instalación debe limpiarse en profundidad, las suciedades pueden obstaculizar la instalación.

Make sure that the floor and the platform (if mounted) are able to withstand at least 800 kg.

Make sure that the floor and supporting surface are flat and level.


This bathtub can be installed on the floor or on a raised or recessed platform.

If the bathtub is placed on the floor, drill a hole that is large and deep enough to accommodate the drain hardware.

When positioning the hole, you should take into account the dimensions of the bathtub.


The installation area must be thoroughly cleaned, dirt can impede installation.

2. POSICIONAMIENTO Y CONEXIÓN DE LA BAÑERA / POSITIONING AND BATHTUB CONNECTION

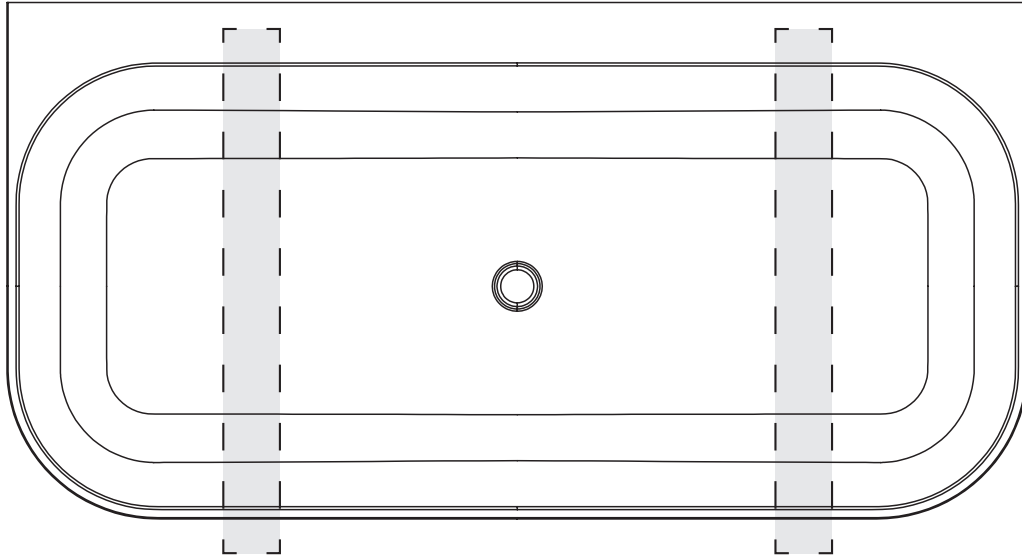


Dado que las bañeras en isla no cuentan con aberturas para revisión, deberá colocarse sobre dos vigas de madera para instalarla. A continuación se debe proceder a conectar el sifón proporcionado (rosca de 1,5 pulgadas) al sumidero. Asegúrese de que la rosca esté colocada correctamente y derecha.


Since the freestanding bathtubs do not have openings for revision, it must be placed on two wooden beams to install it. Next, the provided siphon (1.5 inch thread) must be connected to the sump. Make sure the thread is positioned correctly and right.

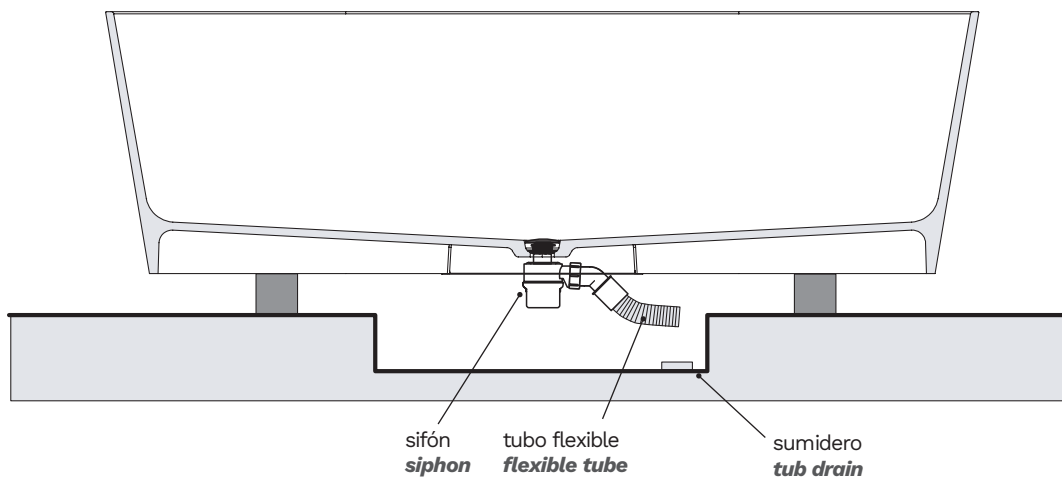

3

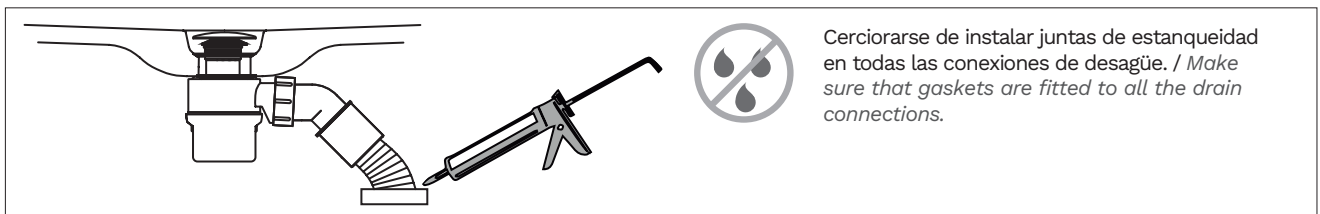

3. DESCENSO DE LA BAÑERA Y UNIÓN CON SILICONA / LOWERING THE BATHTUB AND BONDING WITH SILICONE

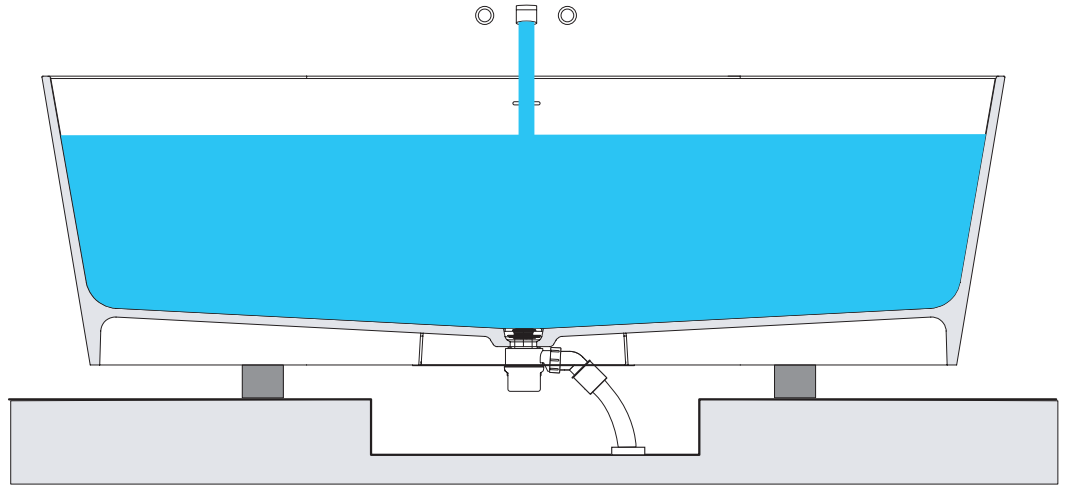

Con la ayuda de un especialista en sanitarios, proceda a abrir el grifo del agua fría y el del agua caliente e inspeccionar todas las conexiones para comprobar que no haya fugas. Llenar la bañera de agua e inspeccionar las conexiones del desagüe para comprobar que no haya fugas.


Llenar la bañera hasta el rebosadero y comprobar si hay fugas.

With the help of a specialist, proceed to Connect the trap to the plug surround as per the drain kit manufacturer's instructions. Turn on the hot and cold water taps and check all connections for leaks.

Fill the bathtub with water and check the drain's connections for leaks.

Fill the bathtub to the overflow and check for leaks.

4

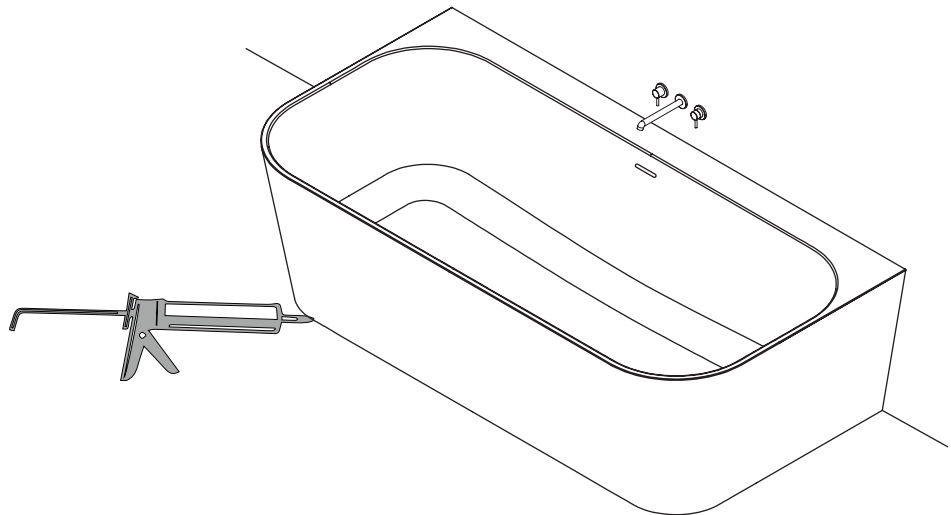

Primero, extraer cuidadosamente una de las vigas de madera de debajo de la bañera, dejándola en contacto directo con los azulejos del piso.

Por último, deberá sellar la superficie de contacto exterior entre la bañera y el suelo mediante silicona. Esto impide que el agua se acumule debajo de la bañera.

First, carefully remove one of the wooden beams from under the bathtub, leaving it in direct contact with the floor tiles. Finally, you must seal the outer contact surface between the bathtub and the floor using silicone. This prevents water from accumulating under the bathtub.